



SMARTLAB
USB 16 CHANNELS RELAY OUTPUT
16 CHANNELS PHOTO ISOLATOR
INPUT

OPERATION MANUAL



Decision Computer Int'l. Co., Ltd.



TABLE OF CONTENTS

CHAPTERS

1. Introduction.....	1
2. Hardware Configuration.....	4
3. Diagnostic under Windows/XP	10
4. Software Programming under Windows/XP and Linux.....	11

APPENDICES

A. Warranty Information.....	12
B. Data Sheet.....	15

CHAPTER 1

INTRODUCTION

The USB 16 channels relay output / photo isolator input card provides photo couple digital input and relay output channels. The photo isolator input part provides 16 photo couple digital input channels, which allow the input signals to be completely floated and prevent the ground loop. The relay output part provides 16 relays to drive 16 different output channels. Each relay channel can be used to control ON/ OFF of external devices, to drive external power relays, to activate alarms... etc.

The USB 16 channels relay output / photo isolator input card provides Plug and Play (PnP) features, it is a programmable I/O interface card for PC/486, Pentium, or compatibles. The on board high speed 8051 uC provides USB functions run at 12Mbps full speed or 1.5Mbps low speed.


❖ The features of USB 16 channels relay output / photo isolator input card are:

- USB2.0 with Plug and Play (PnP) features.
- High speed 8051 uC core.
- Support USB ID selection to identify USB device.
- Support 16 photo couple input channels and 16 relay output channels.
- Allow the photo input signals to be completely floated and prevent the ground loops.
- 32 LED correspond to 32 input/output ports activation status.
- By using PC817 photo couple chips.
- Power supplied from USB or external DC +5V.

- For photo couple input channel, the isolation voltage is 5000V, maximum load voltage is 30V, maximum input current is 50mA forward.
- Activation voltage of photo input:
When short jumpers (input range from 0 to 20V DC)
0 to 3.3V inactive
4.5 to 20V active
When open jumpers (input range from 0 to 30V DC)
0 to 17.6V inactive
18 to 30V active
- For relay output channel, maximum contact rating is 70V/AC, 100V/DC 0.25AMP, minimum response time is 1ms, maximum contact resistance is 0.2 OHM.
- Suitable for Linux, MS/WINDOWS, ... etc.
- Operating temperature range from 0 to 33C.
- Relative humidity rage from 0 to 90%.
- Dimension 250mm*120mm*55mm.
- Weight 470Gram.

❖ PACKAGE CONTENTS:

- SMARTLAB USB 16 channels relay output / 16 channels photo couple input card.
- USB cable.
- User's manual.
- Decision Studio CD for USB Serial Product.
- Warranty form.

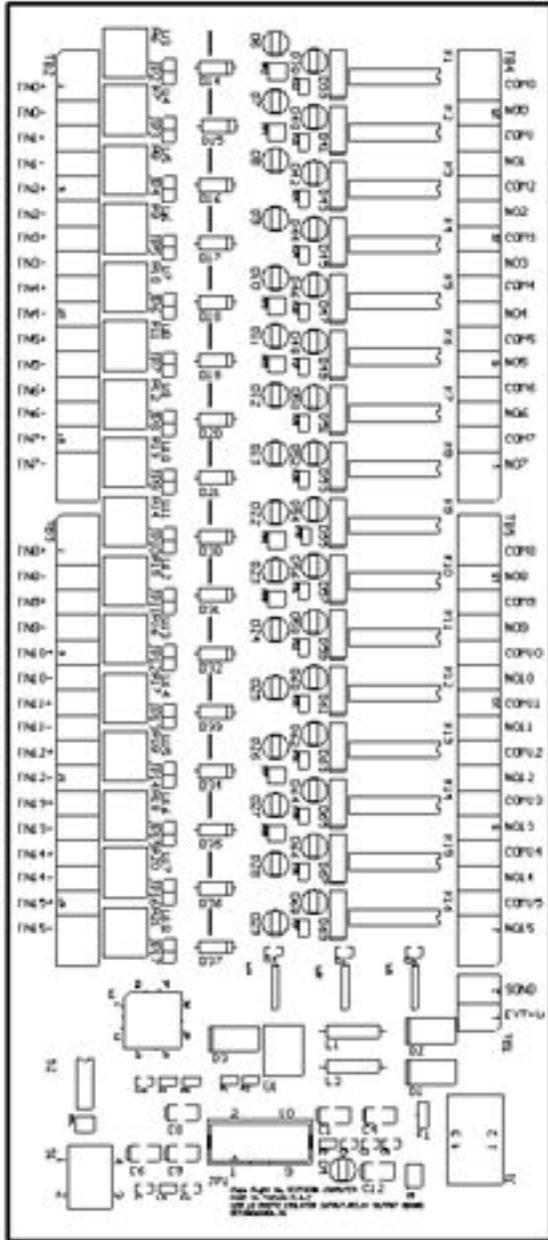

CHAPTER 2

HARDWARE CONFIGURATION

Before you use the USB 16 channels relay output / 16 channels photo couple input card, please ensure that the jumpers and switches setting. The proper jumper and switches settings for the 16 channels relay output / 16 channels photo couple input adapter are described in the following.

2.1 Switch Settings


1. S1 Reset



The S1 switch is used to reset 8051, the signal assignments are shown in the following.

Pin	Signals
3,4	Reset SW+
1,2	Reset SW-

2. S2 USB ID

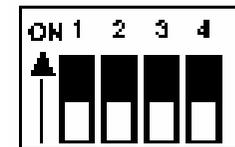

The S2 switch is used to identify USB card ID. Please set different card ID to each card (do not duplicate card ID setting).

1	2	3	4	Card ID
ON	ON	ON	ON	--
OFF	ON	ON	ON	14
ON	OFF	ON	ON	13
OFF	OFF	ON	ON	12
ON	ON	OFF	ON	11
OFF	ON	OFF	ON	10
ON	OFF	OFF	ON	9
OFF	OFF	OFF	ON	8
ON	ON	ON	OFF	7
OFF	ON	ON	OFF	6
ON	OFF	ON	OFF	5
OFF	OFF	ON	OFF	4
ON	ON	OFF	OFF	3
OFF	ON	OFF	OFF	2
ON	OFF	OFF	OFF	1
OFF	OFF	OFF	OFF	0


3. Down load revised firmware

When the S2 switch is set to ON ON ON ON status, means down load revised firmware. please follow the steps shown in the following:

1. Set S2 to ON ON ON ON.
2. Run USBBootloader program to down load revised firmware.


2.2 Jumper Settings

1. External Power Input (TB1)

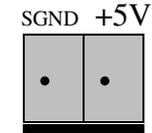

The power of USB 16 channels relay output / photo isolator input card can be supplied from USB, however, if USB can not supply enough power, the external power is need. TB1 is used to input external DC +5V power. Be careful to input DC +5V power.

2. Input Voltage Range Selection (JP2 to JP17)

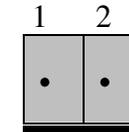


JP2 to JP17 are used to select input voltage range. The JP2 is used to select photo couple input channel 0, and JP3 is used to select photo couple input channel 1 ... etc. When short the jumper, the input voltage range from 0 to 20V, and the active voltage form 4.5 to 20V. When open the jumper, the input voltage range from 0 to 30V, and the active voltage from 18 to 30V.

Jumper	Input Voltage	Inactive Voltage	Active Voltage
open	0 to 30V	0 to 17.6V	18 to 30V
short	0 to 20V	0 to 3.3V	4.5 to 20V

2.3 USB Connector

1. USB Connector

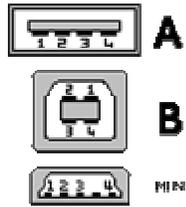

The USB connector is connected to computer USB port by using USB cable.

2.4 Connector Assignments

1. TB2 and TB3 Input Signal Assignments

The photo isolator input signal is assigned in the TB2 and TB3 connector, its pin assignments are show in the below.

TB2

Pin	Signal	Description
1	IN-00+	Opto-isolator Ch. 00 + Input
2	IN-00-	Opto-isolator Ch. 00 - Input
3	IN-01+	Opto-isolator Ch. 01 + Input
4	IN-01-	Opto-isolator Ch. 01 - Input
5	IN-02+	Opto-isolator Ch. 02 + Input
6	IN-02-	Opto-isolator Ch. 02 - Input
7	IN-03+	Opto-isolator Ch. 03 + Input
8	IN-03-	Opto-isolator Ch. 03 - Input
9	IN-04+	Opto-isolator Ch. 04 + Input
10	IN-04-	Opto-isolator Ch. 04 - Input
11	IN-05+	Opto-isolator Ch. 05 + Input
12	IN-05-	Opto-isolator Ch. 05 - Input
13	IN-06+	Opto-isolator Ch. 06 + Input

14	IN-06-	Opto-isolator Ch. 06 - Input
15	IN-07+	Opto-isolator Ch. 07 + Input
16	IN-07-	Opto-isolator Ch. 07 - Input

TB3

Pin	Signal	Description
1	IN-08+	Opto-isolator Ch. 08 + Input
2	IN-08-	Opto-isolator Ch. 08 - Input
3	IN-09+	Opto-isolator Ch. 09 + Input
4	IN-09-	Opto-isolator Ch. 09 - Input
5	IN-10+	Opto-isolator Ch. 10 + Input
6	IN-10-	Opto-isolator Ch. 10 - Input
7	IN-11+	Opto-isolator Ch. 11 + Input
8	IN-11-	Opto-isolator Ch. 11 - Input
9	IN-12+	Opto-isolator Ch. 12 + Input
10	IN-12-	Opto-isolator Ch. 12 - Input
11	IN-13+	Opto-isolator Ch. 13 + Input
12	IN-13-	Opto-isolator Ch. 13 - Input
13	IN-14+	Opto-isolator Ch. 14 + Input
14	IN-14-	Opto-isolator Ch. 14 - Input
15	IN-15+	Opto-isolator Ch. 15 + Input
16	IN-15-	Opto-isolator Ch. 15 - Input

2. TB4 and TB5 Output Signal Assignments

The relay output signal is assigned in TB4 and TB5 connector, its pin assignments are show in the below.

Where (NO-00, COM-00) is OUT00, (NO-01, COM-01) is OUT01, ... etc.

TB4

Pin	Signal	Description
1	NO-00	Relay Ch. 00 - Output
2	COM-00	Relay Ch. 00 - Output

3	NO-01	Relay Ch. 01 - Output
4	COM-01	Relay Ch. 01 - Output
5	NO-02	Relay Ch. 02 - Output
6	COM-02	Relay Ch. 02 - Output
7	NO-03	Relay Ch. 03 - Output
8	COM-03	Relay Ch. 03 - Output
9	NO-04	Relay Ch. 04 - Output
10	COM-04	Relay Ch. 04 - Output
11	NO-05	Relay Ch. 05 - Output
12	COM-05	Relay Ch. 05 - Output
13	NO-06	Relay Ch. 06 - Output
14	COM-06	Relay Ch. 06 - Output
15	NO-07	Relay Ch. 07 - Output
16	COM-07	Relay Ch. 07 - Output

TB5

Pin	Signal	Description
1	NO-08	Relay Ch. 08 - Output
2	COM-08	Relay Ch. 08 - Output
3	NO-09	Relay Ch. 09 - Output
4	COM-09	Relay Ch. 09 - Output
5	NO-10	Relay Ch. 10 - Output
6	COM-10	Relay Ch. 10 - Output
7	NO-11	Relay Ch. 11 - Output
8	COM-11	Relay Ch. 11 - Output
9	NO-12	Relay Ch. 12 - Output
10	COM-12	Relay Ch. 12 - Output
11	NO-13	Relay Ch. 13 - Output
12	COM-13	Relay Ch. 13 - Output
13	NO-14	Relay Ch. 14 - Output
14	COM-14	Relay Ch. 14 - Output
15	NO-15	Relay Ch. 15 - Output
16	COM-15	Relay Ch. 15 - Output

CHAPTER 3

DIAGNOSTIC UNDER WINDOWS/XP

The USB Test Program.exe is a diagnostic program to test your 16 channels relay output and 16 channels photo couple input under Windows/XP.

User can get USB Test Program.exe from Decision Studio CD.

CHAPTER 4**SOFTWARE PROGRAMMING UNDER
WINDOWS/XP AND LINUX**

To input data from photo couple channel or output data to relay output channel, please use Hid API functions. User can get Hid API functions from Decision Studio package.

APPENDIX A**WARRANTY INFORMATION****A.1 Copyright**

Copyright DECISION COMPUTER INTERNATIONAL CO., LTD. All rights reserved. No part of SmartLab software and manual may be produced, transmitted, transcribed, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of DECISION COMPUTER INTERNATIONAL CO., LTD.

Each piece of SmartLab package permits user to use SmartLab only on a single computer, a registered user may use he program on a different computer, but may not use the program on more than one computer at the same time.

Corporate licensing agreements allow duplication and distribution of specific number of copies within the licensed institution. Duplication of multiple copies is not allowed except through execution of a licensing agreement. Welcome call for details.

A.2 Warranty Information

SmartLab warrants that for a period of one year from the date of purchase (unless otherwise specified in the warranty card) that the goods supplied will perform according to the specifications defined in the user manual. Furthermore that

the SmartLab product will be supplied free from defects in materials and workmanship and be fully functional under normal usage.

In the event of the failure of a SmartLab product within the specified warranty period, SmartLab will, at its option, replace or repair the item at no additional charge. This limited warranty does not cover damage resulting from incorrect use, electrical interference, accident, or modification of the product.

All goods returned for warranty repair must have the serial number intact. Goods without serial numbers attached will not be covered by the warranty.

The purchaser must pay transportation costs for goods returned. Repaired goods will be dispatched at the expense of SmartLab.

To ensure that your SmartLab product is covered by the warranty provisions, it is necessary that you return the Warranty card.

Under this Limited Warranty, SmartLab's obligations will be limited to repair or replacement only, of goods found to be defective a specified above during the warranty period. SmartLab is not liable to the purchaser for any damages or losses of any kind, through the use of, or inability to use, the SmartLab product.

SmartLab reserves the right to determine what constitutes warranty repair or replacement.

Return Authorization: It is necessary that any returned goods are clearly marked with an RA number that has been issued by

SmartLab. Goods returned without this authorization will not be attended to.

APPENDIX B DATA SHEET

SHARP PC817 Series

PC817 Series

* Lead forming type (I type) and taping reel type (P type) are also available. (PC817/PC817P)
 ** TÜV (VDE0884) approved type is also available as an option.


■ Features

- Current transfer ratio
(CTR: MIN. 50% at $I_F = 5\text{mA}$, $V_{CE} = 5\text{V}$)
- High isolation voltage between input and output ($V_{iso} : 5000\text{V}$)
- Compact dual-in-line package
 PC817 : 1-channel type
 PC827 : 2-channel type
 PC837 : 3-channel type
 PC847 : 4-channel type

4. Recognized by UL, file No. E64380

■ Outline Dimensions

(Unit : mm)

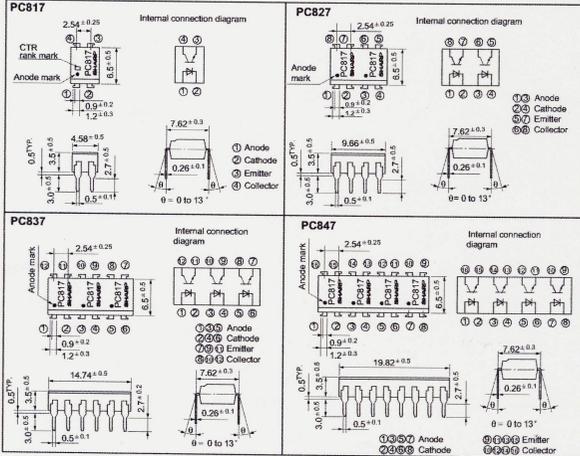

* In the absence of confirmation by device specification sheets, SHARP takes no responsibility for any defects that occur in equipment using any of SHARP's devices, shown in catalogs, data books, etc. Contact SHARP in order to obtain the latest version of the device specification sheets before using any SHARP's device.

High Density Mounting Type Photocoupler

■ Applications

- Computer terminals
- System appliances, measuring instruments
- Registers, copiers, automatic vending machines
- Electric home appliances, such as fan heaters, etc.
- Signal transmission between circuits of different potentials and impedances

SHARP

PC817 Series

■ Absolute Maximum Ratings

(Ta = 25°C)

Parameter	Symbol	Rating	Unit
Forward current	I_F	50	mA
Peak forward current	I_{FM}	1	A
Reverse voltage	V_R	6	V
Power dissipation	P	70	mW
Collector-emitter voltage	V_{CEO}	35	V
Emitter-collector voltage	V_{ECO}	6	V
Collector current	I_C	50	mA
Collector power dissipation	P_C	150	mW
Total power dissipation	P_T	200	mW
Isolation voltage	V_{iso}	5000	V_{rms}
Operating temperature	T_{op}	-30 to +100	°C
Storage temperature	T_{stg}	-55 to +125	°C
Soldering temperature	T_{sol}	260	°C

*1 Pulse width $\leq 10\mu\text{s}$, Duty ratio : 0.001
 *2 40 to 60% RH, AC for 1 minute
 *3 For 10 seconds

■ Electro-optical Characteristics

(Ta = 25°C)


Parameter	Symbol	Conditions	MIN.	TYP.	MAX.	Unit
Forward voltage	V_F	$I_F = 20\text{mA}$	-	1.2	1.4	V
Peak forward voltage	V_{FM}	$I_{FM} = 0.5\text{A}$	-	-	3.0	V
Reverse current	I_R	$V_R = 4\text{V}$	-	-	10	μA
Terminal capacitance	C_T	$V = 0, f = 1\text{kHz}$	-	30	250	pF
Collector dark current	I_{CD}	$V_{CE} = 20\text{V}$	-	-	10^{-7}	A
Current transfer ratio	CTR	$I_F = 5\text{mA}, V_{CE} = 5\text{V}$	50	-	600	%
Collector-emitter saturation voltage	$V_{CE(sat)}$	$I_F = 20\text{mA}, I_C = 1\text{mA}$	-	0.1	0.2	V
Isolation resistance	R_{iso}	DC500V, 40 to 60% RH	5×10^{10}	10^{11}	-	Ω
Floating capacitance	C_F	$V = 0, f = 1\text{MHz}$	-	0.6	1.0	pF
Cut-off frequency	f_c	$V_{CE} = 5\text{V}, I_C = 2\text{mA}, R_L = 100\Omega, 3\text{dB}$	-	80	-	kHz
Response time	Rise time	$V_{CE} = 2\text{V}, I_C = 2\text{mA}, R_L = 100\Omega$	-	4	18	μs
	Full time		-	3	18	μs

*4 Classification table of current transfer ratio is shown below.

Model No.	Rank mark	CTR (%)
PC817A	A	80 to 160
PC817B	B	130 to 260
PC817C	C	200 to 400
PC817D	D	300 to 600
PC8#7AB	A or B	80 to 260
PC8#7BC	B or C	130 to 400
PC8#7CD	C or D	200 to 600
PC8#7AC	A, B or C	80 to 400
PC8#7BD	B, C or D	130 to 600
PC8#7AD	A, B, C or D	80 to 600
PC8#7	A, B, C, D or No mark	50 to 600

* : 1 or 2 or 3 or 4

Fig. 1 Forward Current vs. Ambient Temperature

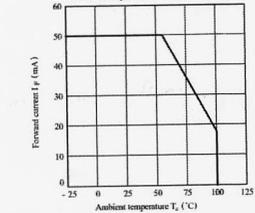

SHARP

PC817 Series

Fig. 2 Collector Power Dissipation vs. Ambient Temperature

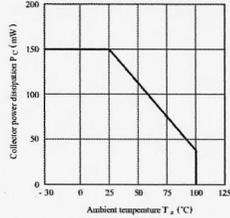


Fig. 3 Peak Forward Current vs. Duty Ratio

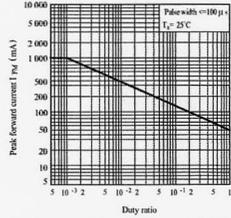


Fig. 4 Current Transfer Ratio vs. Forward Current

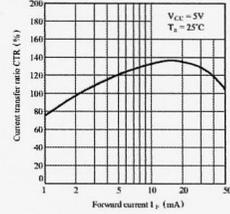


Fig. 5 Forward Current vs. Forward Voltage

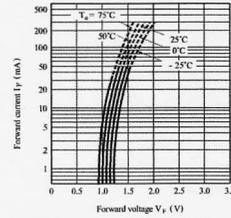


Fig. 6 Collector Current vs. Collector-emitter Voltage


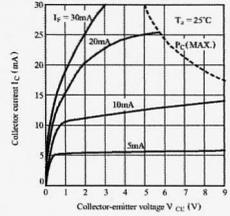


Fig. 7 Relative Current Transfer Ratio vs. Ambient Temperature

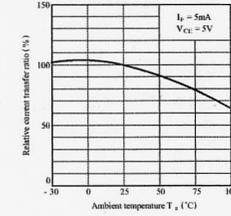

SHARP

PC817 Series

Fig. 8 Collector-emitter Saturation Voltage vs. Ambient Temperature

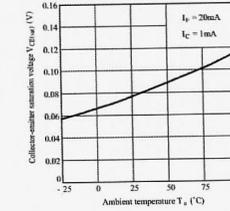


Fig. 9 Collector Dark Current vs. Ambient Temperature

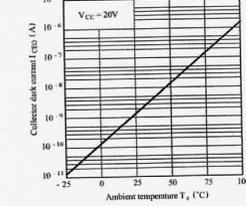


Fig. 10 Response Time vs. Load Resistance



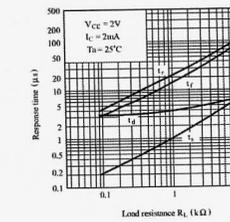


Fig. 11 Frequency Response

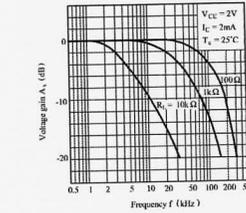

Test Circuit for Response Time



Test Circuit for Frequency Response





Fig. 12 Collector-emitter Saturation Voltage vs. Forward Current

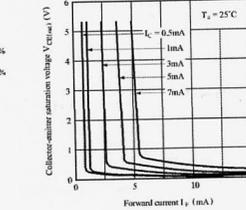

● Please refer to the chapter "Precautions for Use"

Application Circuits**NOTICE**

●The circuit application examples in this publication are provided to explain representative applications of SHARP devices and are not intended to guarantee any circuit design or license any intellectual property rights. SHARP takes no responsibility for any problems related to any intellectual property right of a third party resulting from the use of SHARP's devices.

●Contact SHARP in order to obtain the latest device specification sheets before using any SHARP device. SHARP reserves the right to make changes in the specifications, characteristics, data, materials, structure, and other contents described herein at any time without notice in order to improve design or reliability. Manufacturing locations are also subject to change without notice.

●Observe the following points when using any devices in this publication. SHARP takes no responsibility for damage caused by improper use of the devices which does not meet the conditions and absolute maximum ratings to be used specified in the relevant specification sheet nor meet the following conditions:

(i) The devices in this publication are designed for use in general electronic equipment designs such as:

- Personal computers
- Office automation equipment
- Telecommunication equipment (terminal)
- Test and measurement equipment
- Industrial control
- Audio visual equipment
- Consumer electronics

(ii) Measures such as fail-safe function and redundant design should be taken to ensure reliability and safety when SHARP devices are used for or in connection with equipment that requires higher reliability such as:

- Transportation control and safety equipment (i.e., aircraft, trains, automobiles, etc.)
- Traffic signals
- Gas leakage sensor breakers
- Alarm equipment
- Various safety devices, etc.

(iii) SHARP devices shall not be used for or in connection with equipment that requires an extremely high level of reliability and safety such as:

- Space applications
- Telecommunication equipment (trunk lines)
- Nuclear power control equipment
- Medical and other life support equipment (e.g., scuba).

●Contact a SHARP representative in advance when intending to use SHARP devices for any "specific" applications other than those recommended by SHARP or when it is unclear which category mentioned above controls the intended use.

●If the SHARP devices listed in this publication fall within the scope of strategic products described in the Foreign Exchange and Foreign Trade Control Law of Japan, it is necessary to obtain approval to export such SHARP devices.

●This publication is the proprietary product of SHARP and is copyrighted, with all rights reserved. Under the copyright laws, no part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, in whole or in part, without the express written permission of SHARP. Express written permission is also required before any use of this publication may be made by a third party.

●Contact and consult with a SHARP representative if there are any questions about the contents of this publication.

SHARP

115